

Favorites Zone programming (aka Dynamic Zone) Motorola APX Models Only

Saving a Channel in the Dynamic Zone from List Selection

The Dynamic (Favorite) Zone must be the currently selected zone in order to perform this operation.

- 1** - Navigate menu to "ZnPr". Press the **Menu Select** button directly below "ZnPr" to enter **Program Zone** screen.
- 2** - Press the **Menu Select** button directly below "Edit". The display shows **Search Options** screen.
- 3** - Navigate using the up or down buttons to "List Selection". Press the **Menu Select** button directly below "Sel". The display shows **Select Zone** screen.
- 4** - Press up or down buttons to the required zone. Press the **Menu Select** button directly below "Sel". The display shows **Select Chan** screen.
- 5** - Press up or down buttons to the required channel. Press the **Menu Select** button directly below "Sel". The display shows Channel updated.
- 6** - Press the **Menu Select** button directly below "Exit" to return to **Home** screen.

Deleting a Channel in the Dynamic Zone

The Dynamic (Favorite) Zone must be the currently selected zone in order to perform this operation.

- 1** Navigate to "ZnPr" then press the **Menu Select** button directly below "ZnPr" to enter **Program Zone** screen. The display shows the dynamic channels list.
- 2** Press up or down buttons to the saved dynamic channel then press the **Menu Select** button directly below "Del". The display shows **Channel deleted** screen.
- 3** Press the **Menu Select** button below "Exit" to return to **Home** screen. The **Home** screen shows <Dynamic Zone Channels>. If the channel deleted is the Home channel, the **Home** screen shows <Zone Name>+"Blank".